



Routing the Fog Light Harness

6. Locate the vehicle 1-pin connector, and remove the black tape to release the connector.

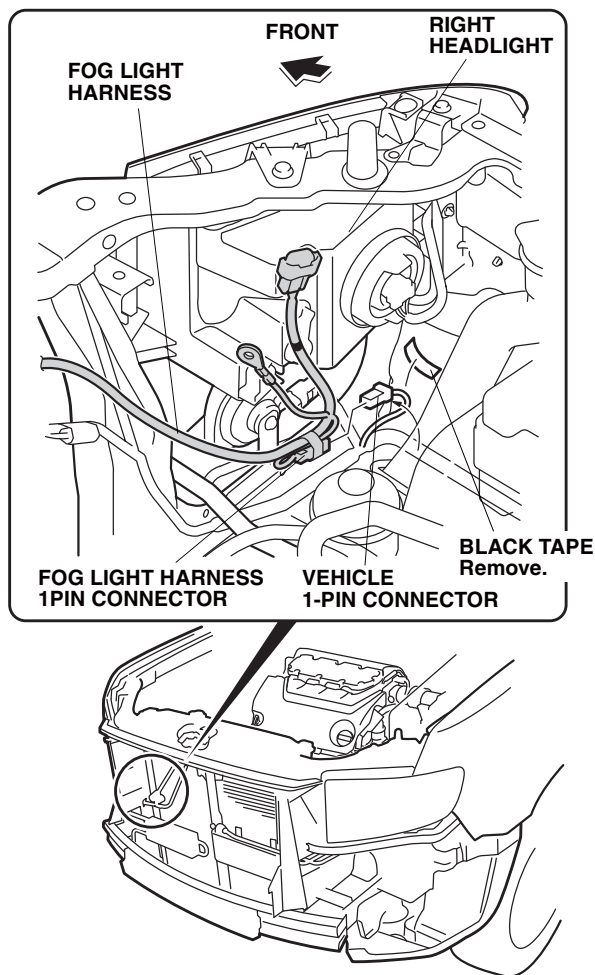


7. Plug the fog light harness 1-pin connector into the vehicle 1-pin connector.

8. Route the fog light harness ground terminal to the underside of the vehicle.

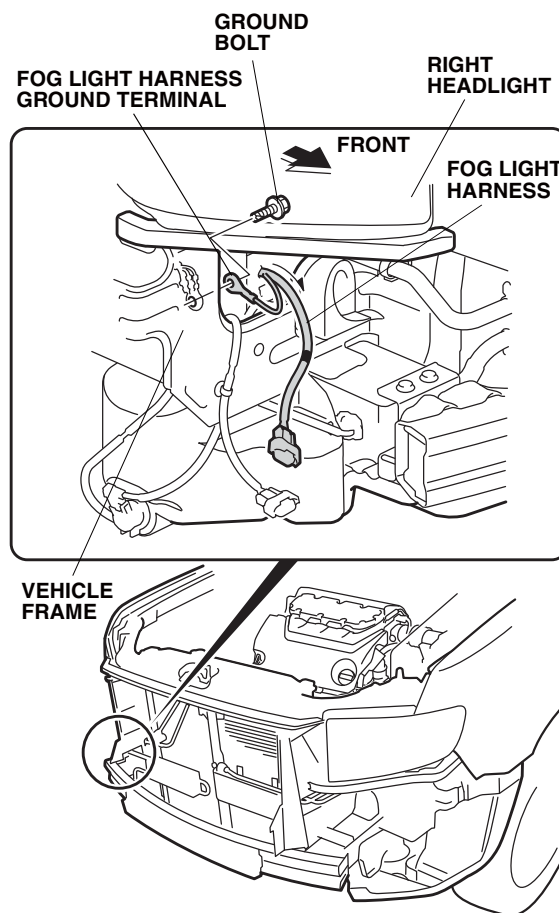


9. Secure the fog light harness ground terminal to the vehicle frame with one ground bolt.

10. Route the fog light harness 2-pin connector (shorter side) as shown, and align the green-taped part of the fog light harness with the vehicle clip.

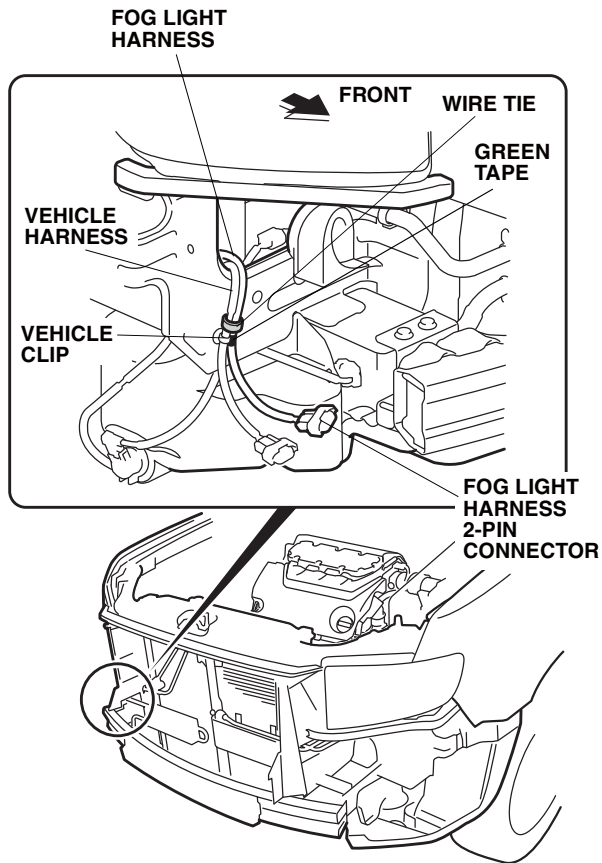

11. Secure the fog light harness to the vehicle harness with one wire tie.

12. Route the fog light harness 2-pin connector (longer section of the harness) along the vehicle harness to the left side of the vehicle as shown.

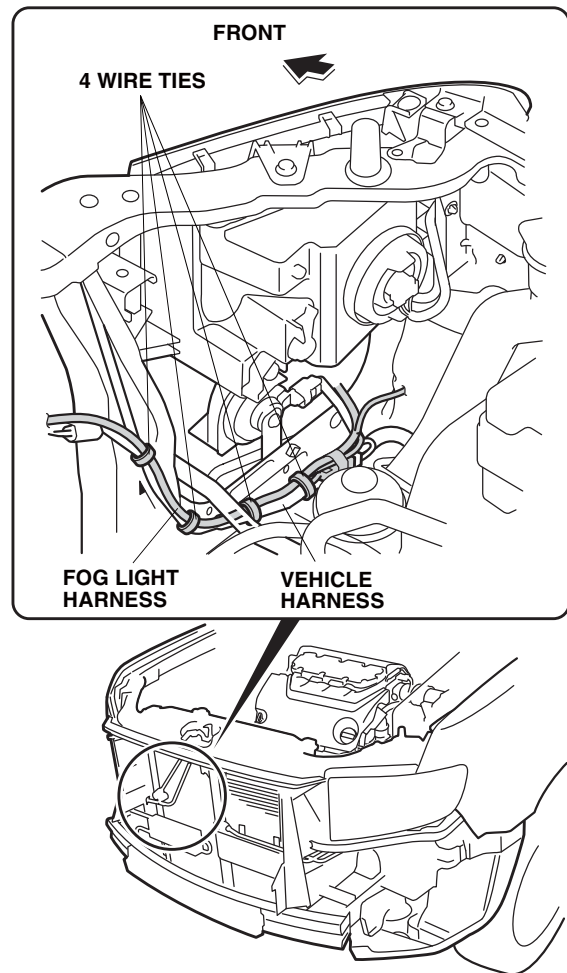

13. Secure the fog light harness to the vehicle harness with four wire ties.